

# Remote Control

You can use the remote control up to a distance of about 23 feet from the TV.

 
- ☑ The performance of the remote control may be affected by bright light.

- 1 POWER button (turns the TV on and off)
- 2 Selects the TV mode directly.
- 3 Number buttons for direct channel access
- 4 One or more digit channel selection
- 5 Temporary sound switch-off
- 6 Available source selection
- 7 Volume increase  
 Volume decrease
- 8 Electronic Program Guide (EPG) display
- 9 Use to quickly select frequently used functions.
- 10 Control the cursor in the menu
- 11 Use to see information on the current broadcast
- 12 Use these buttons in the Channel list and WISELINK, etc.
- 14 Press to select the optional display and sound modes for sports, cinema and games.
- 15 Use these buttons in the Channel list, WISELINK Pro and Anynet+.
- 16 **ON/OFF**  
Press to backlight the buttons on the remote. This function is convenient for using at night or when the room is dark. (Using the remote control with the ON/OFF (light bulb icon) button set to On will reduce the battery usage time.)
- 17 Previous channel
- 18 Next channel  
 Previous channel
- 19 Displays the main on-screen menu
- 20 This function enables you to view and play photo (JPEG), audio files (MP3) and movie files from an external device.
- 21 Returns to the previous menu
- 22 Exit the on-screen menu
- 23 Press to use the News, Stock Market and Weather Forecast information services available over the network.

- 24 Use this when connecting a SAMSUNG DMA (Digital Media Adapter) device through an HDMI interface and switching to DMA mode.  
(The DMA button is optional.) For more information on the operating procedures, refer to the user manual of the DMA. This button is available when **Anynet+(HDMI-CEC)** is On (see page 54)
- 25 This function enables you to view **Content Library**.
- 26 Digital subtitle display

## Teletext Functions


- 2 Exit from the teletext display (depending on the model)
- 6 Teletext mode selection (LIST/FLOF)
- 8 Teletext store
- 9 Teletext size
- 11 Teletext reveal
- 12 Fastext topic selection
- 18 Teletext display/mix both teletext information and the normal broadcast
- 17 Teletext sub page
- 18 P :Teletext next page  
P :Teletext previous page
- 19 Teletext index
- 21 Teletext hold
- 22 Teletext cancel

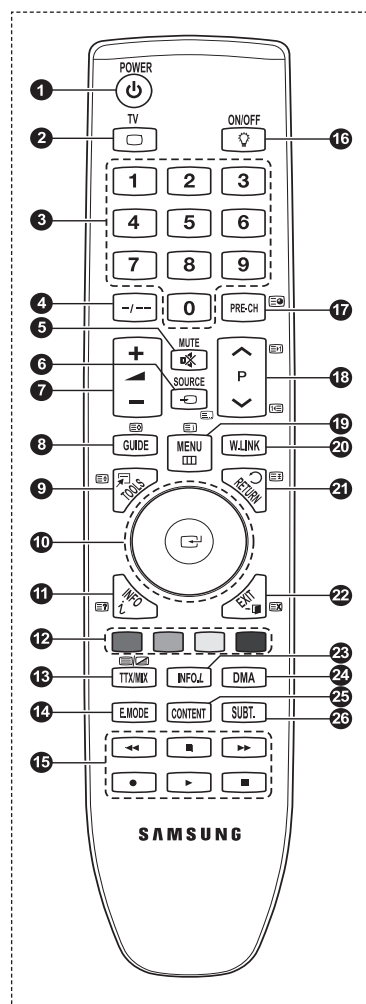

## Plug & Play Feature


When the TV is initially powered on, basic settings proceed automatically and subsequently.

 1. Press the **POWER** button on the remote control. The message **The Menu Language, Store Demo, Channels and Time will be set.** is displayed.
2. Press the **ENTER** button, then **Select the OSD Language.** menu is automatically displayed. Press the **ENTER** button.
3. Select the appropriate language by pressing the **▲** or **▼** button. Press the **ENTER** button to confirm your choice.
4. Press the **◀** or **▶** button to select **Store Demo** or **Home Use**, then the **ENTER** button.
  - ☒ We recommend setting the TV to **Home Use** mode for the best picture in your home environment.
  - ☒ **Store Demo** mode is only intended for use in retail environments.
  - ☒ If the unit is accidentally set to **Store Demo** mode and you want to return to **Home Use** (Standard): Press the Volume button on the TV. When the volume OSD is displayed, press and hold the **MENU** button on the TV for 5 seconds.
  - ☒ The Screen Saver is activated if there is no remote control key input for longer than 1 minute while **Plug & Play** is running.
  - ☒ The Screen Saver is activated if there is no operating signal for longer than 15 minutes.
5. Press the **ENTER** button. Select the appropriate country by pressing the **▲** or **▼** button. Press the **ENTER** button to confirm your choice.
6. Press the **▲** or **▼** button to select the channel source to memorize. Press the **ENTER** button to select **Start**.
  - ☒ **Digital & Analogue:** Digital and Analogue channels.  
**Digital:** Digital channels.  
**Analogue:** Analogue channels.
  - ☒ The channel search will start and end automatically.
  - ☒ Press the **ENTER** button at any time to interrupt the memorization process.
  - ☒ After all the available channels are stored, the message **Set the Clock Mode.** is displayed.
7. Press the **ENTER** button. Press the **▲** or **▼** button to select **Auto**, then Press the **ENTER** button.
  - ☒ If you select **Manual**, **Set current date and time** is displayed. (See page 26)
  - ☒ If you have received a digital signal, the time will be set automatically. If not, see page 26 to set the clock.
8. The message **Enjoy your viewing** is displayed. When you have finished, press the **ENTER** button.

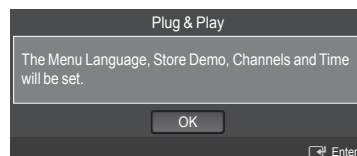

If you want to reset this feature...

 1. Press the **MENU** button to display the menu. Press the **▲** or **▼** button to select **Setup**, then press the **ENTER** button.
2. Press the **ENTER** button again to select **Plug & Play**.
3. Enter your 4 digit PIN number. The default PIN number of a new TV set is '0-0-0-0'.
  - ☒ If you want to change PIN number, refer to 23 page.
  - ☒ The **Plug & Play** feature is only available in the **TV** mode.

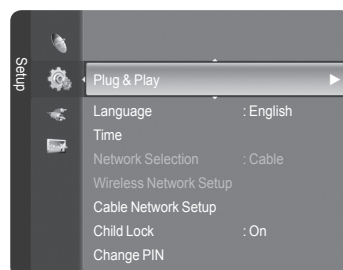

## Channel Control

### Storing Channels and channel

- ☐ **Country**
  - ☒ **Analogue Channel:** You can change the country for analogue channels.
  - ☒ **Digital Channel:** You can change the country for digital channels.
  - ☒ The PIN number input screen appears. Enter your 4 digit PIN number.

